



### Commanding CellStop

You can command your CellStop to act to your specific situation by sending the following messages to your CellStop. (note any cellphone can be used to send the message provided an authorised pin is used).

- STOP,PIN** This will initiate the remote immobilisation of the vehicle (SVR 400 only)
- RESET,PIN** This will reset the remote immobilisation of the vehicle
- HIJACK,PIN** This will send a silent alarm to the control centre of a crisis situation
- SERVICE,PIN** To put your CellStop in service mode

#### Service mode

When CellStop is put in service mode it will not communicate any alarms until service mode is deactivated. To activate service mode send the following message to your CellStop.

#### Service,PIN

To deactivate service mode, the administrator can either phone your CellStop and CellStop will CLIP (caller line identification) the call or an SMS can be sent to your CellStop.

#### Reset,PIN

#### Low Battery and failure monitoring and reporting

No more flat batteries, CellStop will notify you before the battery is too flat to start. It will also notify you should the battery be disconnected.

#### Panic Alarm

If the driver presses the panic button the Control Centre is immediately notified.



Your CellStop Number

### CellStop Alarms

Your CellStop is configured to send alarms either to the administrator cell number or the emergency monitoring centre, or both against preset conditions. Please note if you set up for alarms, each alarm is charged per SMS.

#### Over Speeding

Set a speed limit and receive notification if speed exceeded. Default setting is 130km/h.

#### Moving Violation


Should your vehicle be towed away the CellStop System will notify you via SMS.

Tel: (064) 20-3483 Fax: (064) 20-3492  
e-mail: bernd@cellstop.com

Tel: (086) 509-4164 Fax: (081) 122-5298  
e-mail: michaelm@cellstop.com



www.cellstop.com.na

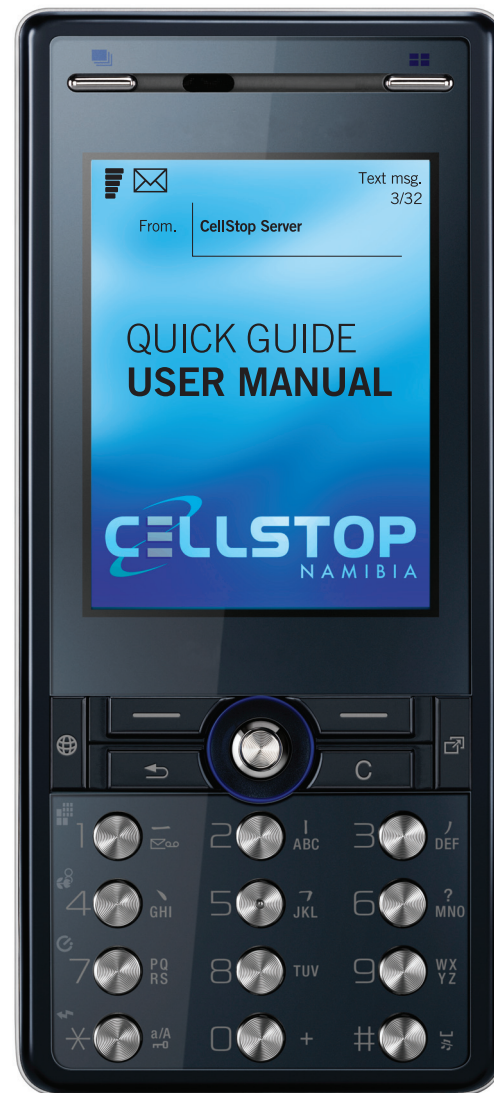



## Congratulations on choosing CellStop.

Your CellStop is a very sophisticated Vehicle Tracking and Management System. It enables you to communicate directly with your vehicle guaranteeing you Real Time information. Whether you want to know where your vehicle is, it's state or the health of your CellStop, you can do it in Real Time from your cellphone.

This guide will help you unlock just some of the features available on your CellStop.

### Authorised Users

CellStop has a unique authentication system, allowing the Administrator of your CellStop to control access to it's features. There can be only one Administrator of CellStop. (The Administrator is given the authority level 00)

CellStop will SMS the new User with the following message after installation:

**A5.X.XXR**  
**You have been added as a user**  
**NAME: USER NAME**  
**LEVEL: 01**  
**Please REPLY with a 6 digit pincode**  
**PIN,(pincode)**

The Administrator is the only authorised User to change any features on CellStop, but the system allows multiple Users (up to 20 with authority level 01) who can talk with your CellStop but may not change settings.

#### Adding a user via sms.

The first User added would be the Administrator (authority level 00). The Administrator would then add other Users by sending the following SMS to the CellStop unit.

to add an Administrator  
**Add,user,00,user name,user cell number**

to add additional Users the Administrator (authority level 00) should send  
**Add,user,01,user name,user cell number**

#### Listing authorised users

To establish the authorised to Users of your CellStop, the Administrator should send the following message to CellStop.

#### List,user

CellStop will send a list of the User names and cell numbers of authorised individuals. The Administrator will be highlighted with \*

#### Deleting Users

To remove an authorised User from CellStop, the Administrator must send the following message:

#### Del,user,user cell number

CellStop will confirm deletion to the Administrator

### Configuring CellStop

Your CellStop has various configuration settings which can be set by the Administrator.

**REPTIME,HH:MM** Set time for daily report (taxi only)  
**ODT,56325** Synchronise vehicle odometer (km) with CellStop  
**SPD,120** Set over speeding limit (km/h)

#### User Programmable Locations

You may add 6 waypoints ie: put a name to a position so that when you do a WRU, instead of responding with a street name, it will respond with the name you programmed in for a specific location eg. Home or Work. The vehicle should be at the location when adding the waypoint.

#### Add,way,location name,radius

Radius is the distance around the location. If no radius is given it defaults to 50m.

#### List,way

List the waypoints on your CellStop.

#### Del,way,index

Where index is the number of the waypoint given in the list, way reponse from CellStop.

### Talking to your CellStop

These commands are sent directly to your CellStop to give you vital information about your vehicle.

**STATUS** Check the health of your CellStop and vehicle  
**WRU** Text message of vehicle location  
**VRU** Display map of vehicle location

#### WRU (Where aRe yoU)

CellStop responds with a location of the vehicle with street names, suburbs and cities.



#### VRU (Visual where aRe yoU)

CellStop responds with a picture of a map with the location of your vehicle at street level (WAP enabled Cellphone required).

